



© Copyright 2013. Black Box Corporation. All rights reserved. Black Box® and the Double Diamond logo are registered trademarks of BB Technologies, Inc. Any third-party trademarks appearing in this manual are acknowledged to be the property of their respective owners.

AVSW-DVI4X1, version 2

FREE! Live, 24/7 Tech Support is just 30 seconds away.  
724-746-5500 | blackbox.com

## 4. Operation

### LED Indicator

The Power LED turns green when the video switch is powered on. When a video port is selected, its corresponding Port LED turns yellow.

### Push Button

Press the corresponding button to select a port.

### Function button

The Function button adjust the optimal video strength corresponding to the length and quality of DVI cable.

To adjust the video signal strength, follow these steps:

1. Press the Function button three times.
2. Press Push button #1 one or two times to adjust the selected port's input video strength. One beep = Normal or two beeps = Enhance.  
or  
Press Push button #3 one or two times to adjust the selected port's output current. One beep = Normal or two beeps = Enhance.  
or  
Press Push button #4 one, two, or three times to adjust the selected port's output emphasis. One beep = no pre-emphasis, two beeps = low pre-emphasis, three beeps = medium pre-emphasis, or four beeps = high pre-emphasis.
3. Once the setting is finished, press the Function button one time to exit the setting.

## 5. IR Remote Control

The remote control operates within a 1.5-ft. (5-m) range of the DVI switch. To select a source device with a remote control, press the number button (1–4 or 1–8) to directly switch to the corresponding port.

### NOTES:

1. Remove the battery protector on the remote control before operation.
2. On the remote control, only buttons 1–4 are activated. The rest of the buttons are reserved for other models.

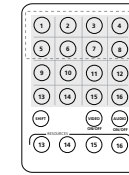


Figure 5-1. Remote control.

## 6. Serial Control

The DVI and audio switches' built in serial interface enables users to control the switch via a PC, serial controller devices, or home theater system. The controller's serial port should be configured as shown in Table 6-1.

Table 6-1. Serial parameters settings.

Parameter	Setting
Baud Rate	9600
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

To select a source device via serial interface, select the number that corresponds to the port. For example, send "1" to switch to Port 1.



<b>Customer Support Information</b>	Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500) FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746 Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018 Web site: www.blackbox.com • E-mail: info@blackbox.com
-------------------------------------	---

## 1. Specifications

- Enclosure — Metal
- Maximum Video Resolution — Full HD 1080p (1920 x 1080), WUXGA (1920 x 1200)
- Number of DVI Inputs — (4)
- Remote Control Support — Yes
- Serial Control Support —Yes
- User Controls — (1) Function button, (4) port selection buttons
- Connectors — Input: (4) DVI (digital only), (1) audio jack; Output: (1) DVI (digital only), (1) audio jack
- Indicators — (5) LEDs: (1) dual-color for Power and Video, (4) LEDs for video input
- Power — Consumption: 6.5 W
- Size — 1.3"H x 8.7"W x 3.9"D (3.4 x 22 x 10 cm)

## 2. Overview

### 2.1 Features

- Select (1) DVI + Audio from (4) DVI + Audio sources.
- Control via front-panel push buttons, IR remote control, or serial control.
- Function button adjusts the optimal video signal strength corresponding to the length or quality of DVI cable.
- LED shows the active status of DVI + Audio sources.
- HDTV compatible.
- Protects content via HDCP.
- Supports up to Full HD 1080p/1920 x 1200 resolution.
- Compatible with most of the popular screen resolutions to XGA, SXGA, UXGA, WSXGA, Full HD, WUXGA system.

## 2.2 What's Included

4 x 1 DVI and Audio Switch (AVSW-DVI4X1):

- Video switch
- (1) DB9 F to ear jack cable, 3.8-ft. (1.2-m)
- Rear bracket
- Screw kit
- Foot pad
- IR remote controller
- Power supply and power cord
- This user manual
- Optional:
  - Audio cable

## 2.3 Hardware Description

Figure 2-1 shows the front and back panels of the AVSW-DVI4X1. Table 2-1 describes its components.

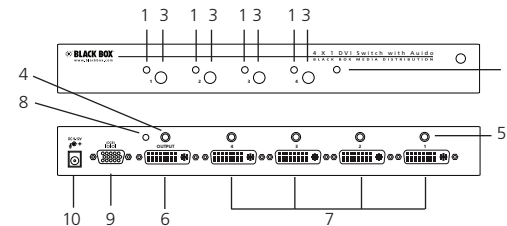


Figure 2-1. 4X1 DVI and Audio switch front and back panels.

Table 2-1. 4X1 DVI and Audio switch components.

Number in Fig. 2-1	Component	Description
1	(4) Input LED indicators	On Yellow when port 1–4 is selected. Off when port 1–4 is not selected.
2	(1) Power LED indicator	On Green when power to the unit is on. Off when power to the unit is off.
3	(4) Push buttons	Press buttons 1–4 to select a port.
4	(1) Audio port (Output)	Connects to a speaker.
5	(4) Audio ports (Input)	Connect to audio sources 1–4.
6	(1) Video port (Output)	Connects to a display.
7	(4) Video ports (Input)	Connect to video sources 1–4.
8	(1) Function button	Adjusts the video signal strength.
9	(1) Serial port	Connects to a computer for serial control.
10	Power supply	Applies power to the unit.

## 3. Installation

- Before installation, power off all devices that will be connected to this system.
- Make sure that all devices you will connect are properly grounded.
- Place cables away from fluorescent lights, air conditioners, and machines that are likely to generate electrical noise.

NOTE: If no screen displays, follow these steps:

1. Make sure the device cables are correctly and firmly attached.
2. Set your display device's input source as DVI.
3. Check the PC BIOS configuration for the video output settings.
4. Connect your computer to the display DIRECTLY to check if the video signal gets through.

### Installation Steps

1. Use a video cable (DVI) to connect the display to the video output port on the back of the switch. Plug a set of audio jacks from the speaker to the switch's speaker port.
2. Use a video cable (DVI) to connect the source device to the video input port on the switch. Use an audio cable to connect the speaker port from the input side of the switch to the corresponding output port on the source device.
3. Plug the power supply into the switch and power on the switch.
4. Turn on the display (monitor, projector, or TV) and then power on the source device(s).